


Grid view

The Grid allows users to browse and open installed apps.

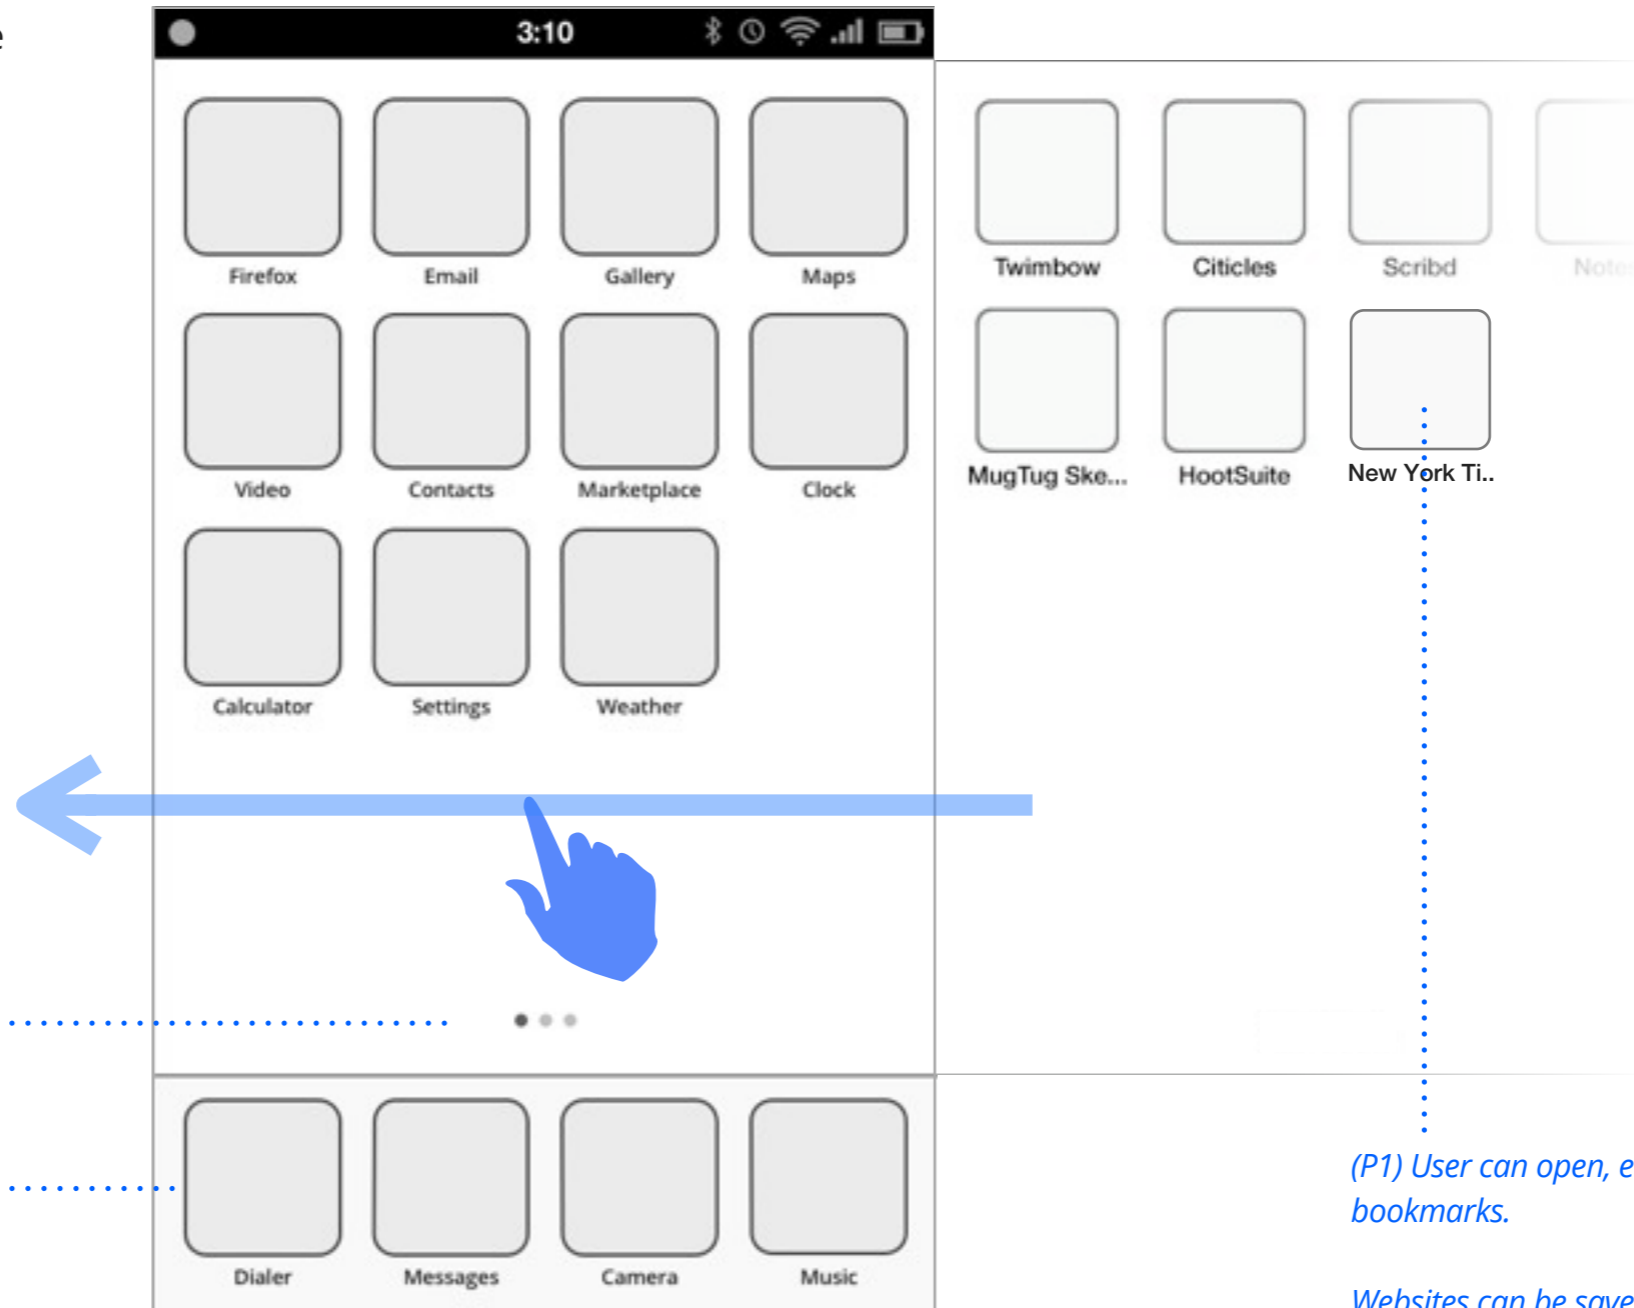

Pagination indicators show the current location.

Dock component (optional)

Users can swipe between "pages" of apps.


(P1) User can open, edit and delete web site bookmarks.

Websites can be saved to the Home Grid from the browser. Once placed, they appear and behave like normal apps. When pressed, they open in the default browser.


Grid view: Edit mode



(P1) User can **rearrange** installed apps. Press-and-hold to enter "Edit" mode. All apps become editable. Drag an app's icon to move it.

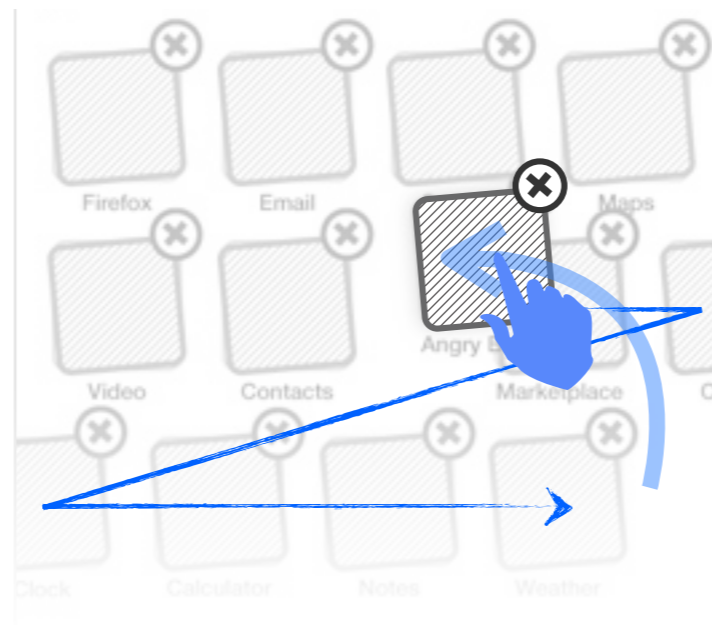


Icons automatically rearrange themselves top-left to bottom-right, and collapse to fill any gaps or expand to make room.

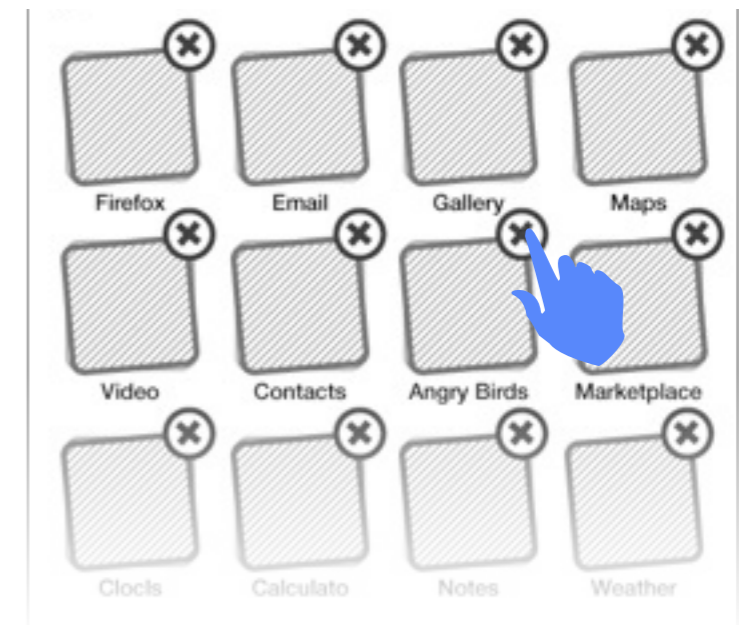

User can **delete** installed "unlocked" apps. Tap the App's "Delete" button while in "Edit" mode.

(P1) User cannot delete installed "locked" apps (eg: Dialer)

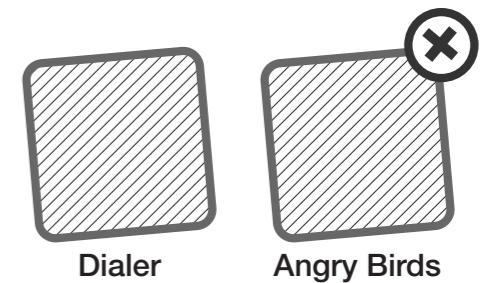

Wallpaper component




Press-and-hold empty area of home app.




Choose a source



*Gallery activity view:
Grid list of pre-loaded camera photos. Tap thumbnail to view.*

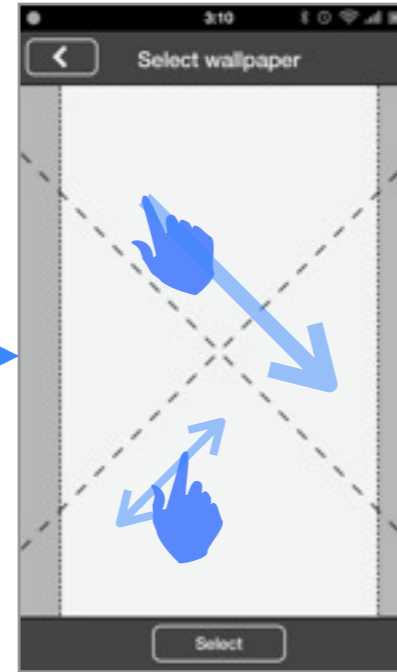

*Preview & Adjust:
Pinch to scale. Drag to reposition. Preview overlay shows final cropping.*

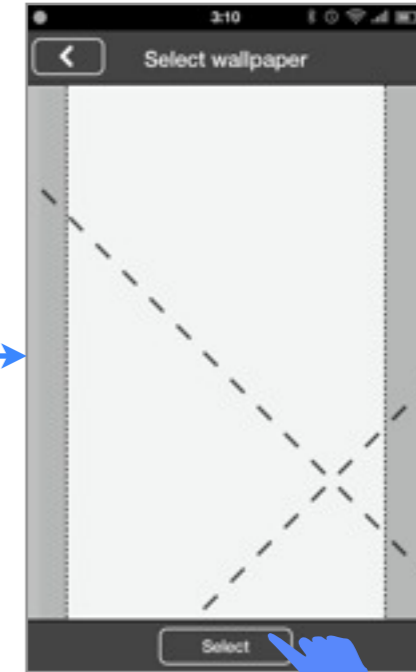


Tap "Select" to confirm.



*Gallery activity view:
Grid list of camera photos. Tap thumbnail to view.*



*Preview full image:
Swipe left/right to browse. Tap "Back" to return to list. Tap "Select" to confirm.*

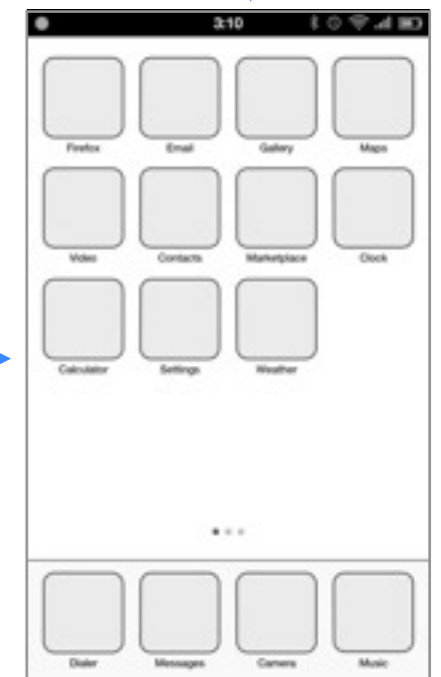

User is returned to home app. Selected wallpaper has been applied.

There are three ways to set the wallpaper of the Home app.

- From Home app
- From Settings app
- From Gallery app

Each method is reliant on Gallery activities to complete the process. Depicted on this page are those activities being invoked directly from Home app.